

Installing the Wood-Werx CarveLight into the Carviewright Woodworking System

1. Remove the cover from the Carviewright:
 - a. Reference:
www.carviewright.com/assets/service/Service_instructions/CarveWright_service_remove_head_cover.pdf
2. Remove the backing of the LED strip to reveal the adhesive. Apply the LED strip to the inside of the Carviewright cover (on the raised area that is directly behind the Flex Shaft Slot). Apply the LED strip, placing the Power cables on the side with the Head Cover Cable Harness.




a.

3. Apply the Cable Clips to the inside of the TOP of the Cover:



a.

4. Clip the Power Cable into the Cable Clips

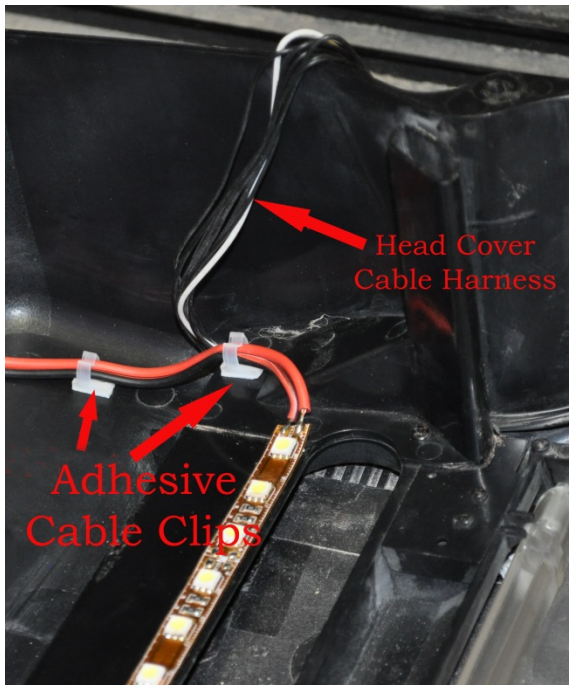

a.

5. Place a 21/64 hole into the back of the cover. (Place the hole as close to the edges as possible while remaining on the flat surface. This will ensure that the power connector does not interfere with the Y Truck)



a.

6. Remove the Nut from the Power Connector:



a.

7. Place the Power Connector through the hole and replace the nut that you removed in step 6:




a.



b.

8. Reinstall the Cover to the Carviewright
9. Check that the LED power cable does not interfere with the movement of the Y Truck.

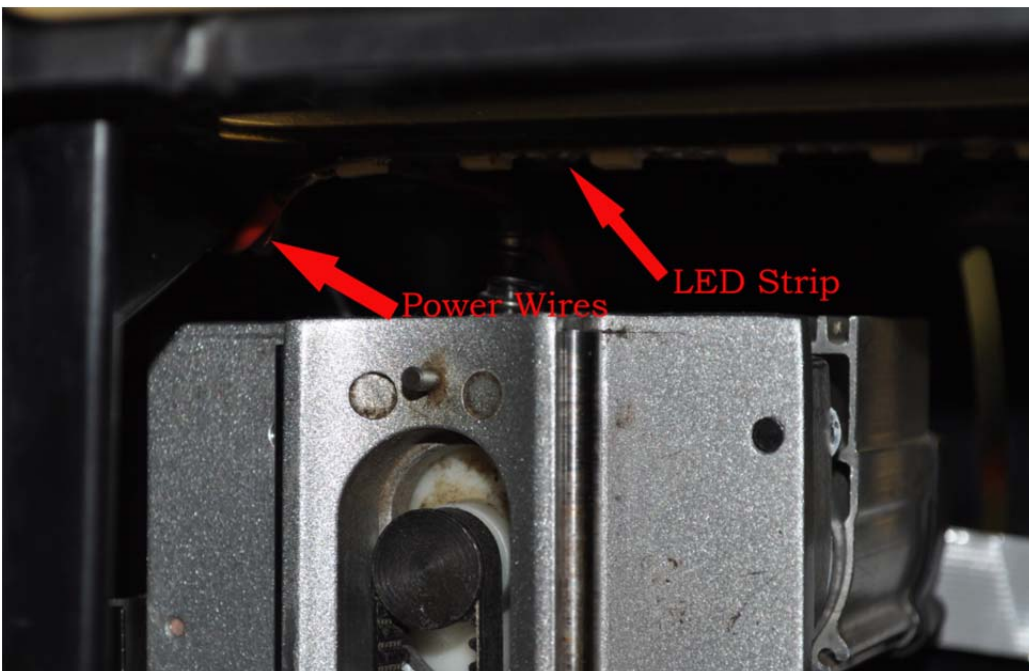

a.

10. Plug the Power Supply into the Power Connector



a.

11. Congratulations! Your new CarveLight should be installed and the interior of your Carviewright should be well lit for future carves.